











What to do if...
What to do if...

	A tire punctures	P. 569	If you have a flat tire
	The engine does not start	P. 582	If the engine will not start
		P. 100	Engine immobilizer system
		P. 589	If the battery is discharged
	The shift lever cannot be moved out	P. 584	If the shift lever cannot be shifted from P
	The engine coolant temperature gauge enters the red zone	P. 592	If your vehicle overheats
	Steam can be seen coming from under the hood		
	The key is lost	P. 585	If you lose your keys
	The battery runs out	P. 589	If the battery is discharged
	The doors cannot be locked	P. 46	Side doors
		P. 49	Back door
	The horn begins to sound	P. 102	Alarm
	The vehicle is stuck in mud or sand	P. 595	If the vehicle becomes stuck

What to do if...



A warning light or indicator light comes on

P. 540

If a warning light turns on or a warning buzzer sounds...



■ Warning lights



Brake system warning light

or



P. 540



ABS warning light

or



P. 541



Low fuel level warning light

P. 542



SRS warning light

P. 541



Open door warning light

P. 542



Charging system warning light

P. 540



Malfunction indicator lamp

or



P. 541



Driver's seat belt reminder light

P. 542



Front passenger's seat belt reminder light

P. 542



Master warning light

P. 542



Electric power steering warning light

P. 541



Pre-collision system warning light

P. 541



Tire pressure warning light

P. 542